

# MS910

## 機能キー(Windows)

左 Ctrl メイク



\*\$T%W\*

左 Ctrl ブレイク



\*\$T+A\*

右 Ctrl メイク



 
\*\$T+G\*

右 Ctrl ブレイク




\*\$T+H\*

左 Alt メイク




\*\$T%L\*

 左 Alt ブレイク



\*\$T%M\*

 右 Alt メイク



\*\$T+E\*

右 Alt ブレイク



\*\$T+F\*

左 Shift メイク



\*\$T%N\*

左 Shift ブレイク



 
\*\$T%O\*

右 Shift メイク



\*\$T+I\*

右 Shift ブレイク



\*\$T+J\*

左 Win メイク



\*\$T+K\*

左 Win ブレイク



\*\$T+L\*

右 Win メイク



\*\$T+M\*

右 Win ブレイク



\*\$T+N\*

F1



\*\$TA\*

F2



\*\$TB\*

F3



 
\*\$TC\*

F4



\*\$TD\*

F5



\*\$TE\*

F6



\*\$TF\*

F7



\*\$TG\*

F8



\*\$TH\*

F9



\*\$TI\*

F10



\*\$TJ\*

F11



\*\$TK\*

F12



\*\$TL\*

→



 
\*\$TO\*

←



\*\$TP\*

↑



\*\$TQ\*

↓



\*\$TR\*

Home



\*\$TM\*

End



\*\$TN\*

Page Up



\*\$TS\*

Page Down



\*\$TT\*

TAB



\*\$TU\*

バック TAB



\*\$TV\*

Back Space



\*\$TY\*

Delete



\*\$T%K\*

ESC



\*\$TW\*

Insert



\*\$TZ\*

Enter



\*\$TX\*

Enter(テンキー)



\*\$T+D\*

Space



\*\*

アプリケーション



\*\$T+O\*